

Operating instructions

1. **Power On:** With the player switched off, press and hold the “▶ ||” button for a couple of seconds to switch the player on. The indicator light will illuminate.
2. **Power Off:** With the player switched on, press and hold the “▶ ||” button for a couple of seconds to switch the player off. The indicator light will extinguish.
3. **Play:** Within approximately 30 seconds of switching the player on, press the “▶ ||” button to start playback. The indicator light will slowly flash to show playback.
4. **Pause:** Whilst in play mode, press the “▶ ||” button to pause playback. If you do not resume playback within approx. 30 seconds, the player will switch itself off to conserve power.
5. **Prev/Next:** In play mode, press the “◀/V+” button to skip forward a track. If the current track is the last one, it will skip to the first one. Press the “▶/V-” button to skip back a track. If the current track is the first one, it will skip to the last one.
6. **Vol +/Vol -:** In play mode, press and hold the “◀/V+” button to increase the volume. Press and hold the “▶/V-” button to decrease the volume.

Note: If you do not press any button within approximately 30 seconds of switching the player on, it will automatically switch itself off to conserve battery power.

Specification

- FLASH Memory.....128/256/512/1024MB (according to model)
- Music format.....MP3, WMA
- Power supply.....single AAA battery
- USB2.0.....read 1033KB/S, write 955KB/S
- Supported operating system.....Windows 98/SE/ME/2000/XP, Mac OS X
- Size (mm).....90 x 27 x 17 (approx.)
- Weight (exc. battery).....20g (approx.)

Troubleshooting

The player cannot be turned on.	Please make sure the battery is fresh, installed correctly and that the polarities are the right way round.
No sound can be heard from the earphones.	Please make sure the volume is not turned down and the earphones are properly connected. Please make sure the earphones are clean.
The player cannot download the music properly.	Check to see if the player is properly connected to the PC. Check to see if the driver is properly installed (Windows 98/SE only). Make sure that your OS is up-to-date (using Windows Update).

For online support, please visit www.SOSmp3.com