



DPF-701 User Manual

Thank you for purchasing this product. Please keep this manual for future reference.

Quick-start

1. Connect the power adapter
2. Insert your memory card into the slot
3. Press PLAY once to display the first picture
4. Use the LEFT and RIGHT buttons to scroll through your pictures
5. Press PLAY a second time to start the slideshow
6. Press PLAY a third time to pause at a particular picture, and again to resume

Menu navigation

Press SETUP to enter the menu

Press LEFT and RIGHT to navigate through a list

Press PLAY to select a menu item

Press EXIT to go back one step

Setup menu

Press SETUP whilst in standby mode (i.e. with thumbnails displayed).

Image display changes the display format of your pictures

Slideshow effect changes the transition between pictures

Slideshow interval adjusts the time each picture is displayed for

Colour changes the brightness, contrast, saturation and hue

OSD language changes the language of the on-screen display

Reset setting reverts all settings to the factory default

Firmware version displays information about the item's software

Picture menu

Select an individual picture either by manually scrolling through, or by pausing the slideshow. Press SETUP.

Exif displays the picture's tag information (if available)

Save as logo makes the selected picture appear as the start-up screen

Delete removes the selected picture from the memory card

Zoom enlarges the picture (press PLAY to incrementally increase the size)

Rotate turns the picture through 90 degrees (press PLAY to rotate 90 degrees at a time)

For online support, please visit www.SOSmp3.com